

POWERCOIL

Powercoil Wood Shaft Models and Specs:

SHAFT	FLEX	LENGTH	WEIGHT	TORQUE	TIP OD	BUTT OD	PARALLEL TIP	BEND POINT
Powercoil RH50	Stiff	46"	51gr	4.2	.335"	.600"	3.5"	Mid
Powercoil RH50	Regular	46"	51gr	4.6	.335"	.600"	3.5"	Mid
Powercoil RH50	FL (A/L)*	47"	51gr	5.2	.335"	.580"	6.5"	Low
Powercoil RH65	X-Stiff	46"	73gr	3.0	.335"	.600"	3.5"	Mid
Powercoil RH65	Stiff	46"	66gr	3.1	.335"	.600"	3.5"	Mid
Powercoil RH65	Regular	46"	63gr	3.5	.335"	.600"	4.5"	Mid
Powercoil RH65	Senior	46"	63gr	3.5	.335"	.600"	4.5"	Mid

*FL = Flexible Flex (A/L combo flex) see trim instructions below

Powercoil Tip Trimming Instructions:

SHAFT	DRIVER	3W*	5W*	7W*	9W*
Powercoil HP65 (all flexes)	Butt trim only	1.0"	1.5"	2.0"	2.5"
Powercoil HP50 (S & R flexes)	Butt trim only	1.0"	1.5"	2.0"	2.5"
Powercoil HP50 (FL flex to L)	Butt trim only	1.0"	1.5"	2.0"	2.5"
Powercoil HP50 (FL flex to A)	1.0"	2.0"	2.5"	3.0"	3.5"

*Tip trim can be adjusted to fine tune playing characteristics.

*Tip trim should not exceed (Parallel Tip - Hosel Depth).

*Perform tip trim and then butt trim to final playing length.